


ADDITION FOR CHAPTER ,INSTALLATION OF THE RESERVE CHUTE'

Follow the Instructions on page 52 until point 5 / COTTER PINS.

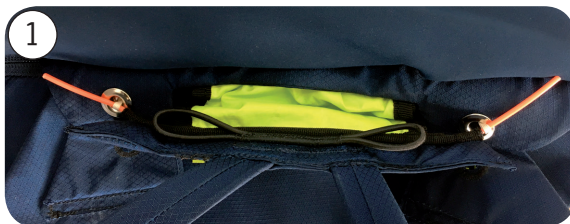

Next, secure the COTTER PINS with elastic cord as shown in picture 2.



Be sure to insert the COVER FLAPS completely into the opening and check the velcros to fit each other.



The upper side of the rescue handle is connected with a velcro for the L size and with a magnet for the S & M size.



FINISHED!

Your skywalk team
PURE PASSION FOR FLYING