



LINE DATA
/POISON4

DE Information Leinendaten


Grundsätzlich wird für Gleitschirmchecks und Leinenvermessungen empfohlen, ein von skywalk zertifiziertes Checkcenter aufzusuchen. Nur dann kann garantiert werden, dass die Überprüfung nach Herstellervorgaben erfolgt.

Da das Klima, die Belastung sowie die Handhabung einen erheblichen Einfluss auf die Alterung des Gleitschirms haben, dienen die bereitgestellten Daten als Hilfestellung, ersetzen aber keineswegs einen fachkundigen Check. Des Weiteren ist es äußerst schwierig, ohne Vorkenntnisse eine verlässliche und reproduzierbare Gleitschirmvermessung durchzuführen.

EN Information line data

For paraglider inspections and line measurements, it is recommended to visit a check center certified by skywalk. This is the only way to guarantee that the inspection is carried out according to the manufacturer's specifications.

Because the climate, the load, and the handling have considerable influence on the aging of the paraglider, the data provided serves as an aid, but in no way replaces an expert inspection. Furthermore, it is extremely difficult to perform a reliable and reproducible paraglider measurement without prior experience.

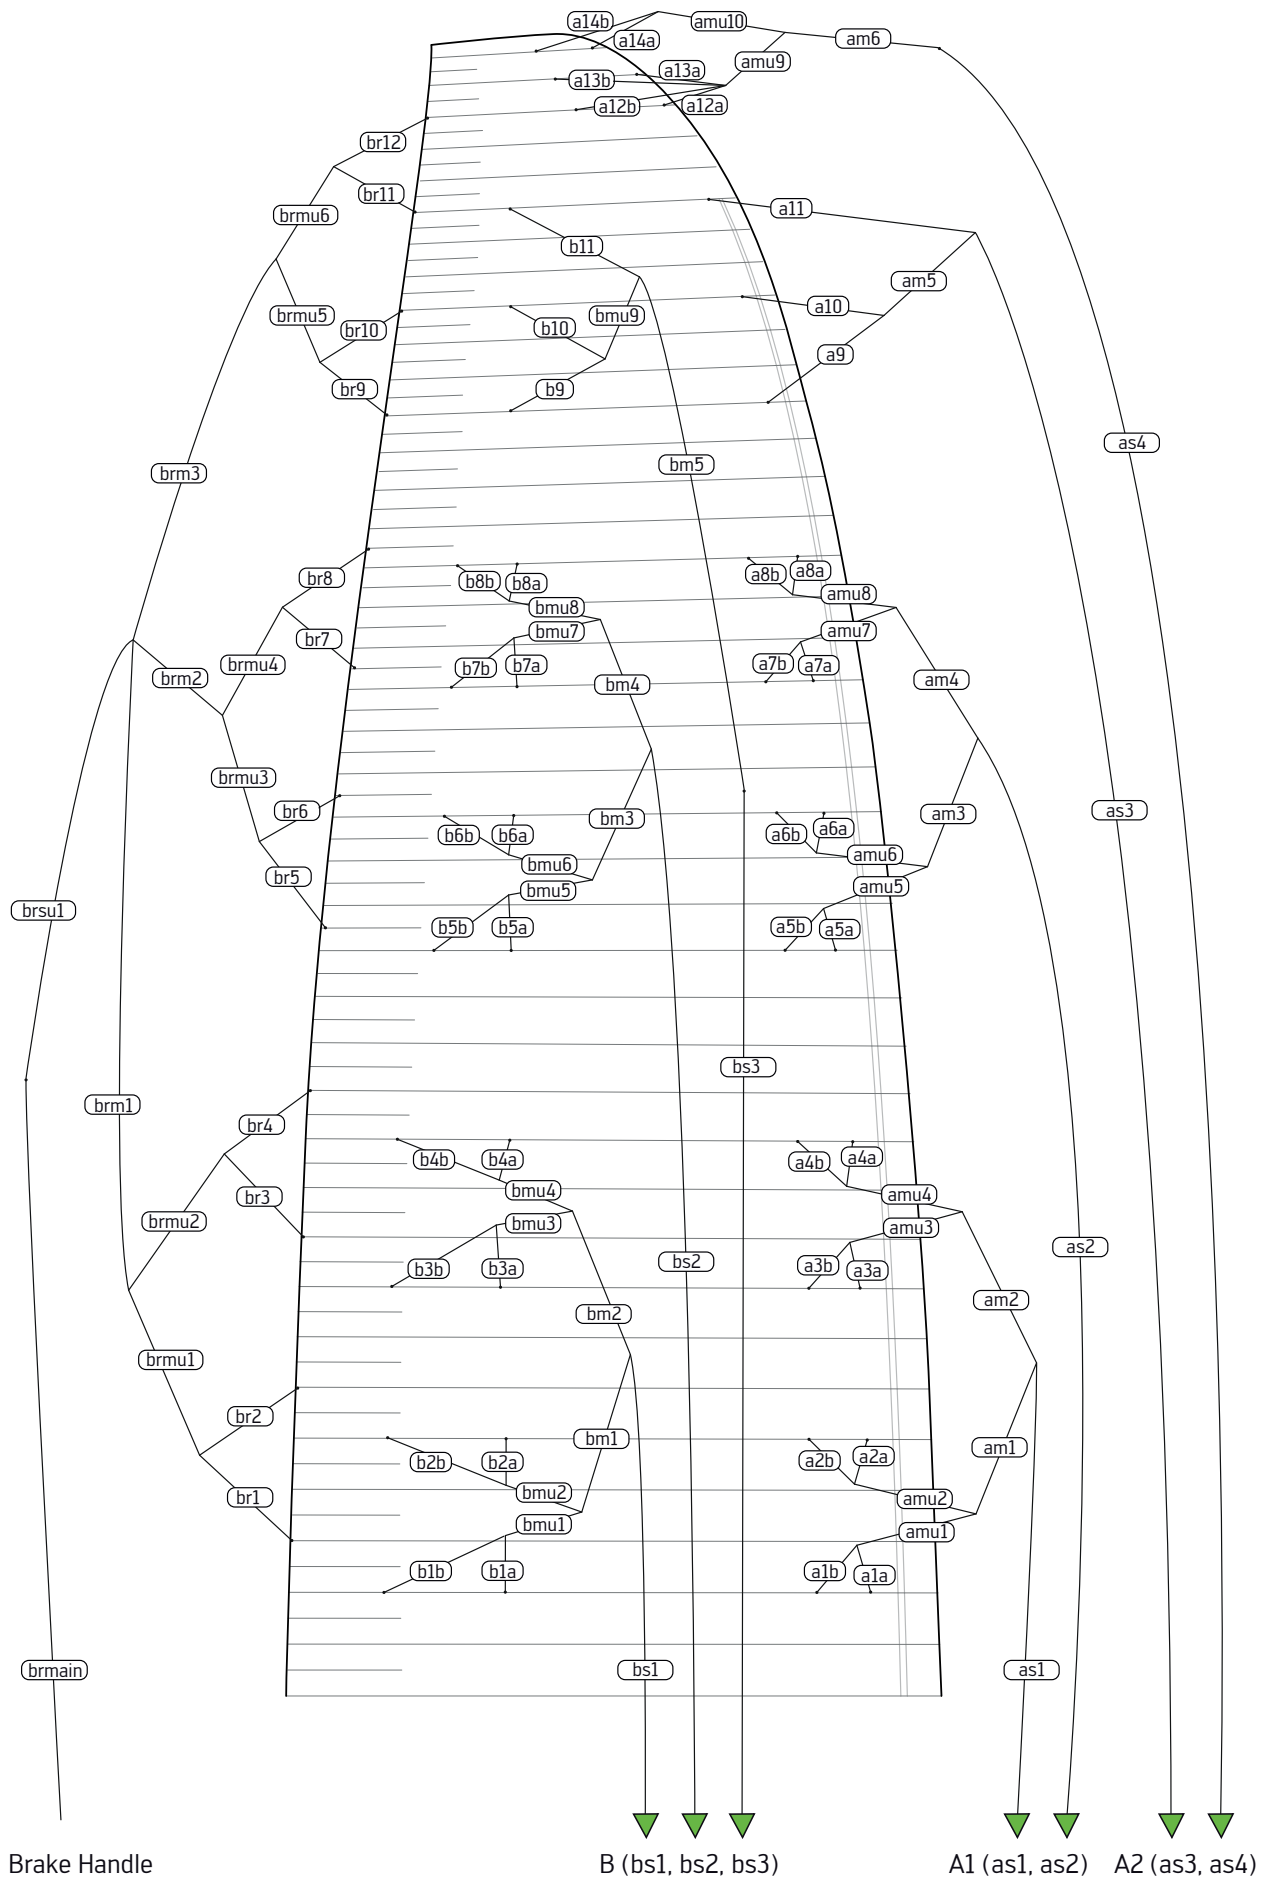


DE Anweisung Leinenvermessung Gesamtleinenlänge

- Die Vermessung der Gesamtleinenlängen erfolgt inklusive Tragegurte und bis zum Untersegel.
- Leinen werden grundsätzlich unter einer Last von 5daN gemessen.
- Bei Motortragedgurten erfolgt die Messung ohne betätigten Trimmer bzw. bei vollständig geschlossenem Trimmer, sprich alle Leinenschlösser befinden sich auf selber Höhe.
- Der Bolzendurchmesser für die Vermessung beträgt 8mm.
- Die Bremsleine wird vom Knoten am Bremsgriff bis zum Untersegel (inkl. Raffsystem) gemessen.

EN Instructions for line measurement total line length

- The measurement of the total line lengths is done including risers and up to the lower sail.
- Lines should always measured under a load of 5daN.
- In the case of risers for powered paragliders, the measurement is carried out without the trimmer activated or with the trimmer fully closed, i.e. all line shackles are at the same height.
- The pin diameter for the measurement is 8mm.
- The brake line is measured from the knot at the brake handle to the lower sail (incl. gathering system).

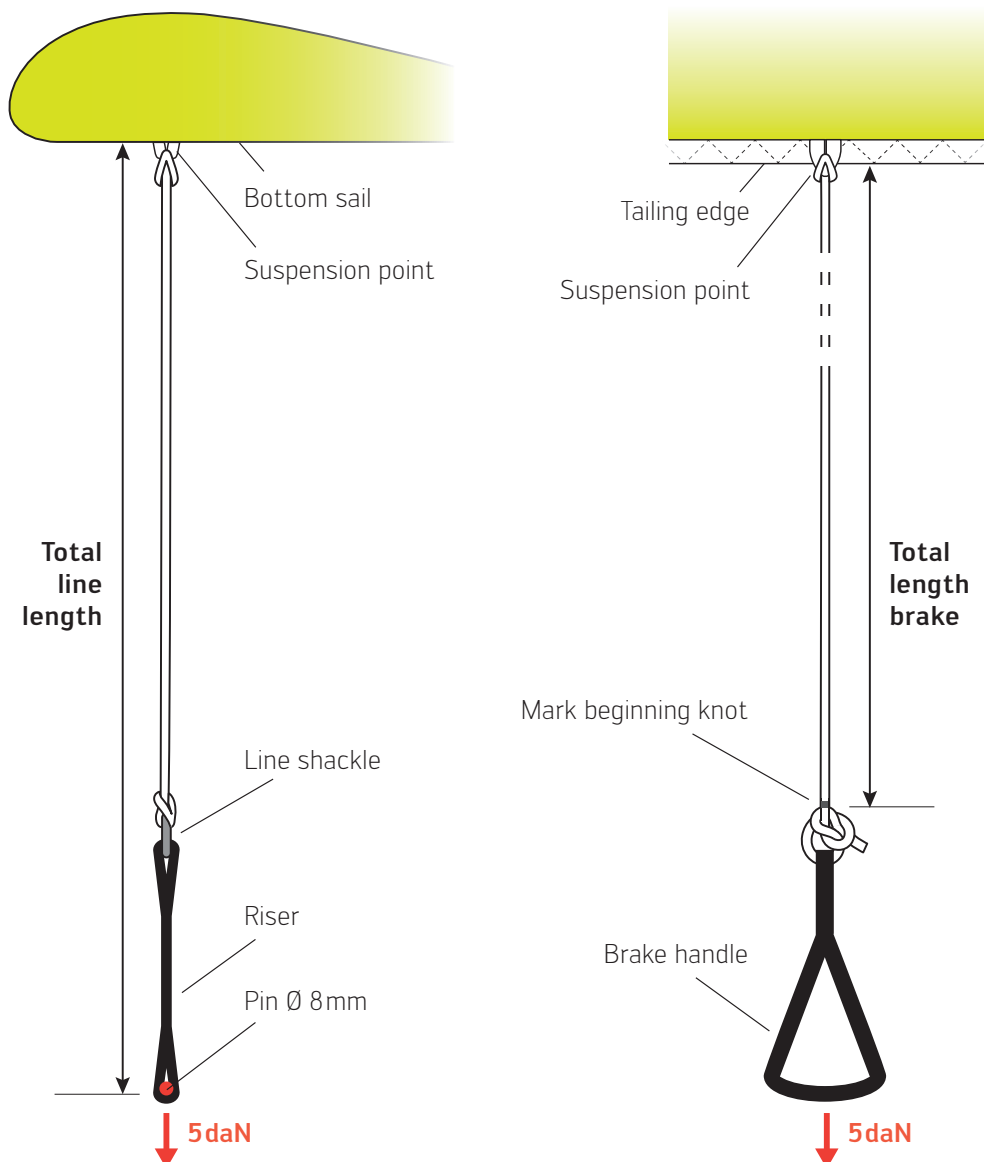

Size 85

AA	Nom
a1a	7291
a2a	7206
a3a	7170
a4a	7190
a5a	7119
a6a	7032
a7a	6989
a8a	6990

A	Nom
a9	6836
a10	6750
a11	6697

AB	Nom
a1b	7284
a2b	7197
a3b	7161
a4b	7183
a5b	7112
a6b	7025
a7b	6983
a8b	6984

BA	Nom
b1a	7274
b2a	7187
b3a	7152
b4a	7174
b5a	7099
b6a	7018
b7a	6980
b8a	6989

B	Nom
b9	6820
b10	6751
b11	6690

BB	Nom
b1b	7358
b2b	7272
b3b	7235
b4b	7250
b5b	7159
b6b	7073
b7b	7032
b8b	7033

SAB	Nom
a12a	6630
a12b	6625
a13a	6590
a13b	6615
a14a	6584
a14b	6608

BRAKE	Nom
br1	7677
br2	7394
br3	7218
br4	7155
br5	7072
br6	6908
br7	6847
br8	6881
br9	6790
br10	6700
br11	6685
br12	6734

Size 95

AA	Nom
a1a	7488
a2a	7400
a3a	7365
a4a	7385
a5a	7314
a6a	7226
a7a	7181
a8a	7182

A	Nom
a9	7025
a10	6937
a11	6884

AB	Nom
a1b	7481
a2b	7391
a3b	7356
a4b	7378
a5b	7306
a6b	7219
a7b	7174
a8b	7177

BA	Nom
b1a	7469
b2a	7381
b3a	7346
b4a	7368
b5a	7293
b6a	7210
b7a	7171
b8a	7181

B	Nom
b9	7004
b10	6933
b11	6872

BB	Nom
b1b	7556
b2b	7468
b3b	7431
b4b	7447
b5b	7355
b6b	7267
b7b	7225
b8b	7226

SAB	Nom
a12a	6812
a12b	6807
a13a	6771
a13b	6797
a14a	6764
a14b	6789

BRAKE	Nom
br1	7879
br2	7590
br3	7408
br4	7344
br5	7258
br6	7090
br7	7028
br8	7064
br9	6972
br10	6881
br11	6865
br12	6916

Size 105

AA	Nom
a1a	7706
a2a	7617
a3a	7581
a4a	7604
a5a	7526
a6a	7436
a7a	7391
a8a	7393

A	Nom
a9	7232
a10	7143
a11	7087

AB	Nom
a1b	7699
a2b	7608
a3b	7572
a4b	7596
a5b	7518
a6b	7428
a7b	7384
a8b	7387

BA	Nom
b1a	7683
b2a	7594
b3a	7558
b4a	7582
b5a	7505
b6a	7420
b7a	7380
b8a	7391

B	Nom
b9	7211
b10	7138
b11	7076

BB	Nom
b1b	7772
b2b	7684
b3b	7645
b4b	7663
b5b	7569
b6b	7478
b7b	7436
b8b	7438

SAB	Nom
a12a	6989
a12b	6983
a13a	6946
a13b	6972
a14a	6939
a14b	6960

BRAKE	Nom
br1	8090
br2	7794
br3	7608
br4	7544
br5	7455
br6	7283
br7	7220
br8	7257
br9	7165
br10	7071
br11	7056
br12	7107

Size 115

AA	Nom
a1a	7897
a2a	7808
a3a	7771
a4a	7796
a5a	7722
a6a	7631
a7a	7585
a8a	7587

A	Nom
a9	7422
a10	7330
a11	7273

AB	Nom
a1b	7890
a2b	7799
a3b	7762
a4b	7788
a5b	7715
a6b	7623
a7b	7578
a8b	7581

BA	Nom
b1a	7879
b2a	7788
b3a	7753
b4a	7778
b5a	7700
b6a	7613
b7a	7573
b8a	7585

B	Nom
b9	7400
b10	7326
b11	7262

BB	Nom
b1b	7971
b2b	7880
b3b	7843
b4b	7861
b5b	7766
b6b	7673
b7b	7630
b8b	7633

SAB	Nom
a12a	7173
a12b	7166
a13a	7128
a13b	7154
a14a	7119
a14b	7145

BRAKE	Nom
br1	8287
br2	7985
br3	7794
br4	7729
br5	7636
br6	7460
br7	7396
br8	7434
br9	7341
br10	7246
br11	7231
br12	7285

Size 125

AA	Nom
a1a	8088
a2a	7997
a3a	7962
a4a	7986
a5a	7908
a6a	7814
a7a	7767
a8a	7769

A	Nom
a9	7600
a10	7506
a11	7448

AB	Nom
a1b	8080
a2b	7988
a3b	7953
a4b	7978
a5b	7900
a6b	7807
a7b	7759
a8b	7763

BA	Nom
b1a	8063
b2a	7971
b3a	7935
b4a	7962
b5a	7882
b6a	7793
b7a	7753
b8a	7766

B	Nom
b9	7578
b10	7502
b11	7438

BB	Nom
b1b	8158
b2b	8073
b3b	8027
b4b	8048
b5b	7950
b6b	7855
b7b	7812
b8b	7816

SAB	Nom
a12a	7370
a12b	7364
a13a	7326
a13b	7352
a14a	7318
a14b	7344

BRAKE	Nom
br1	8514
br2	8204
br3	8011
br4	7944
br5	7849
br6	7669
br7	7605
br8	7644
br9	7550
br10	7452
br11	7437
br12	7492

DE Anweisung Leinenvermessung Einzelleine

- Leinen werden grundsätzlich unter einer Last von 5daN gemessen.
- Der Bolzendurchmesser für die Einzelleinenmessung beträgt 4mm.

Leinentausch


Da sich die Leinenlängen durch Alterung und äußere Einflüsse verändern können, empfehlen wir nach einem Leinentausch, den Gleitschirm zu vermessen.

EN Instructions for line measurement singleline length

- Lines should always measured under a load of 5daN.
- The pin diameter for the single line measurement is 4mm.

Line replacement


Since the line lengths can change due to aging and external influences, we recommend to measure the paraglider after a line replacement.

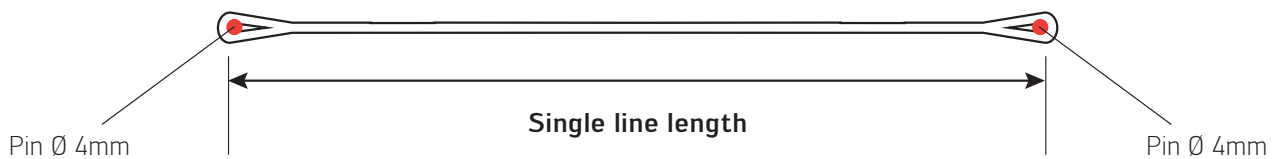

Pos	85	95	105	115	Material	Colour	Comment
a1a	205	211	216	221	8001-90	magenta	double spliced both sides
a2a	204	209	214	220	8001-90	magenta	double spliced both sides
a3a	200	205	210	215	8001-90	magenta	double spliced both sides
a4a	193	198	204	209	8001-90	magenta	double spliced both sides
a5a	183	188	193	197	8001-70	magenta	double spliced both sides
a6a	182	187	192	197	8001-70	magenta	double spliced both sides
a7a	175	180	185	189	8001-70	magenta	double spliced both sides
a8a	172	176	181	185	8001-70	magenta	double spliced both sides
a9	927	951	975	1000	8001-50	magenta	double spliced both sides
a10	841	863	886	908	8001-50	magenta	double spliced both sides
a11	1719	1765	1810	1855	8001-50	magenta	double spliced both sides
amu1	1146	1176	1206	1236	8001-130	magenta	double spliced both sides
amu2	1063	1091	1120	1149	8001-90	magenta	double spliced both sides
amu3	1060	1088	1115	1142	8001-90	magenta	double spliced both sides
amu4	1086	1114	1143	1172	8001-130	magenta	double spliced both sides
amu5	1034	1061	1088	1116	8001-90	magenta	double spliced both sides
amu6	948	974	999	1025	8001-90	magenta	double spliced both sides
amu7	890	913	936	959	8001-70	magenta	double spliced both sides
amu8	894	918	942	965	8001-90	magenta	double spliced both sides
am1	1628	1670	1712	1754	8001-190	magenta	double spliced both sides
am2	1599	1642	1685	1729	8001-190	magenta	double spliced both sides
am3	1404	1441	1477	1513	8001-190	magenta	double spliced both sides
am4	1425	1463	1501	1540	8001-130	magenta	double spliced both sides
am5	935	959	984	1008	8001-90	magenta	double spliced both sides
as1	3805	3924	4045	4159	8001-340	magenta	double spliced top/ bottom side loop cover
as2	3987	4113	4237	4365	8001-340	magenta	double spliced top/ bottom side loop cover
as3	4454	4595	4733	4874	8001-130	magenta	double spliced top/ bottom side loop cover
a1b	198	204	209	214	8001-90	magenta	double spliced both sides
a2b	195	200	205	211	8001-90	magenta	double spliced both sides
a3b	191	196	201	206	8001-90	magenta	double spliced both sides
a4b	186	191	196	201	8001-90	magenta	double spliced both sides
a5b	176	180	185	190	8001-70	magenta	double spliced both sides
a6b	175	180	184	189	8001-70	magenta	double spliced both sides
a7b	169	173	178	182	8001-70	magenta	double spliced both sides
a8b	166	171	175	179	8001-70	magenta	double spliced both sides


Pos	85	95	105	115	Material	Colour	Comment
b1a	576	591	606	621	8001-50	blue	double spliced both sides
b2a	564	579	594	609	8001-50	blue	double spliced both sides
b3a	550	565	579	593	8001-50	blue	double spliced both sides
b4a	535	549	563	577	8001-50	blue	double spliced both sides
b5a	726	745	764	783	8001-50	blue	double spliced both sides
b6a	685	703	721	739	8001-50	blue	double spliced both sides
b7a	637	654	670	687	8001-50	blue	double spliced both sides
b8a	592	608	623	639	8001-50	blue	double spliced both sides
b9	902	926	950	974	8001-50	blue	double spliced both sides
b10	833	855	877	900	8001-50	blue	double spliced both sides
b11	1704	1750	1796	1842	8001-50	blue	double spliced both sides
bmu1	760	780	800	820	8001-70	blue	double spliced both sides
bmu2	685	704	723	741	8001-50	blue	double spliced both sides
bmu3	693	711	729	747	8001-50	blue	double spliced both sides
bmu4	730	749	769	788	8001-70	blue	double spliced both sides
bmu5	454	466	478	490	8001-50	blue	double spliced both sides
bmu6	414	425	436	447	8001-50	blue	double spliced both sides
bmu7	402	412	422	433	8001-50	blue	double spliced both sides
bmu8	456	468	480	493	8001-50	blue	double spliced both sides
bmu9	935	959	984	1009	8001-50	blue	double spliced both sides
bm1	1624	1666	1708	1750	8001-90	blue	double spliced both sides
bm2	1595	1638	1681	1725	8001-90	blue	double spliced both sides
bm3	1373	1409	1445	1481	8001-90	blue	double spliced both sides
bm4	1395	1432	1470	1507	8001-90	blue	double spliced both sides
bm5	3967	4105	4243	4383	8001-50	blue	double spliced both sides
bs1	3801	3922	4039	4158	8001-190	blue	double spliced top/ bottom side loop cover *
bs2	4033	4162	4287	4415	8001-130	blue	double spliced top/ bottom side loop cover *
bs3	500	500	500	500	PPSL5125	blue	*
b1b	660	678	695	713	8001-50	blue	double spliced both sides
b2b	649	666	684	701	8001-50	blue	double spliced both sides
b3b	633	650	666	683	8001-50	blue	double spliced both sides
b4b	611	628	644	660	8001-50	blue	double spliced both sides
b5b	786	807	828	849	8001-50	blue	double spliced both sides
b6b	740	760	779	799	8001-50	blue	double spliced both sides
b7b	689	708	726	744	8001-50	blue	double spliced both sides
b8b	636	653	670	687	8001-50	blue	double spliced both sides

* Please make a larkshead on the riser shackle

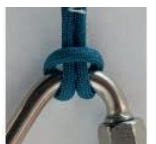

Pos	85	95	105	115	Material	Colour	Comment
a12a	389	393	404	414	9200-30		double spliced both sides
a12b	379	383	393	402	9200-30		double spliced both sides
a13a	349	352	361	369	9200-30		double spliced both sides
a13b	369	373	382	390	9200-30		double spliced both sides
a14a	212	211	217	222	9200-30		double spliced both sides
a14b	231	231	233	243	9200-30		double spliced both sides
amu9	578	593	609	624	9200-30		double spliced both sides
amu10	707	725	744	760	9200-30		double spliced both sides
am6	4650	4815	4945	5104	8001-50	orange	double spliced both sides
as4	500	500	500	500	PPSL5125	orange	*
br1	876	899	922	945	9200-30		double spliced both sides
br2	593	610	626	643	9200-30		double spliced both sides
br3	815	836	857	878	9200-30		double spliced both sides
br4	752	772	793	813	9200-30		double spliced both sides
br5	756	776	796	816	9200-30		double spliced both sides
br6	592	608	624	640	9200-30		double spliced both sides
br7	621	637	653	669	9200-30		double spliced both sides
br8	655	673	690	707	9200-30		double spliced both sides
br9	593	608	624	639	9200-30		double spliced both sides
br10	503	517	530	544	9200-30		double spliced both sides
br11	475	487	500	512	9200-30		double spliced both sides
br12	524	538	551	566	9200-30		double spliced both sides
brmu1	1345	1380	1415	1450	9200-30		double spliced both sides
brmu2	947	972	998	1024	9200-30		double spliced both sides
brmu3	1030	1056	1083	1109	9200-30		double spliced both sides
brmu4	940	965	991	1016	9200-30		double spliced both sides
brmu5	842	864	886	907	9200-30		double spliced both sides
brmu6	855	878	901	924	9200-30		double spliced both sides
brm1	2694	2763	2832	2901	8001-50	orange	double spliced both sides
brm2	2524	2589	2655	2720	8001-50	orange	double spliced both sides
brm3	2593	2663	2734	2804	8001-50	orange	double spliced both sides
brsu1	1507	1582	1666	1736	8001-190	orange	double spliced both sides
brmain	1200	1200	1200	1200	DFLP200/32	orange	please add 20cm extra

* Please make a larkshead on the riser shackle

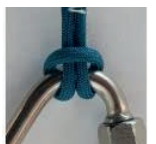

Pos	125	Material	Colour	Comment
a1a	227	8001-90	magenta	double spliced both sides
a2a	225	8001-90	magenta	double spliced both sides
a3a	221	8001-90	magenta	double spliced both sides
a4a	214	8001-90	magenta	double spliced both sides
a5a	202	8001-70	magenta	double spliced both sides
a6a	201	8001-70	magenta	double spliced both sides
a7a	194	8001-70	magenta	double spliced both sides
a8a	190	8001-70	magenta	double spliced both sides
a9	1024	8001-50	magenta	double spliced both sides
a10	930	8001-50	magenta	double spliced both sides
a11	1901	8001-50	magenta	double spliced both sides
amu1	1266	8001-130	magenta	double spliced both sides
amu2	1177	8001-130	magenta	double spliced both sides
amu3	1170	8001-130	magenta	double spliced both sides
amu4	1201	8001-130	magenta	double spliced both sides
amu5	1143	8001-90	magenta	double spliced both sides
amu6	1050	8001-90	magenta	double spliced both sides
amu7	983	8001-90	magenta	double spliced both sides
amu8	989	8001-90	magenta	double spliced both sides
am1	1796	8001-230	magenta	double spliced both sides
am2	1772	8001-230	magenta	double spliced both sides
am3	1551	8001-190	magenta	double spliced both sides
am4	1578	8001-130	magenta	double spliced both sides
am5	1033	8001-90	magenta	double spliced both sides
as1	4274	8001-470	magenta	double spliced top/ bottom side loop cover
as2	4481	8001-340	magenta	double spliced top/ bottom side loop cover
as3	5003	8001-190	magenta	double spliced top/ bottom side loop cover
a1b	219	8001-90	magenta	double spliced both sides
a2b	216	8001-90	magenta	double spliced both sides
a3b	212	8001-90	magenta	double spliced both sides
a4b	206	8001-90	magenta	double spliced both sides
a5b	194	8001-70	magenta	double spliced both sides
a6b	194	8001-70	magenta	double spliced both sides
a7b	186	8001-70	magenta	double spliced both sides
a8b	184	8001-70	magenta	double spliced both sides

Pos	125	Material	Colour	Comment
b1a	636	8001-50	blue	double spliced both sides
b2a	624	8001-50	blue	double spliced both sides
b3a	608	8001-50	blue	double spliced both sides
b4a	591	8001-50	blue	double spliced both sides
b5a	802	8001-50	blue	double spliced both sides
b6a	757	8001-50	blue	double spliced both sides
b7a	704	8001-50	blue	double spliced both sides
b8a	655	8001-50	blue	double spliced both sides
b9	998	8001-50	blue	double spliced both sides
b10	922	8001-50	blue	double spliced both sides
b11	1888	8001-50	blue	double spliced both sides
bmu1	840	8001-70	blue	double spliced both sides
bmu2	760	8001-50	blue	double spliced both sides
bmu3	764	8001-50	blue	double spliced both sides
bmu4	808	8001-70	blue	double spliced both sides
bmu5	502	8001-50	blue	double spliced both sides
bmu6	458	8001-50	blue	double spliced both sides
bmu7	443	8001-50	blue	double spliced both sides
bmu8	505	8001-50	blue	double spliced both sides
bmu9	1033	8001-50	blue	double spliced both sides
bm1	1792	8001-90	blue	double spliced both sides
bm2	1768	8001-90	blue	double spliced both sides
bm3	1516	8001-90	blue	double spliced both sides
bm4	1544	8001-90	blue	double spliced both sides
bm5	4513	8001-70	blue	double spliced both sides
bs1	4269	8001-230	blue	double spliced top/ bottom side loop cover *
bs2	4536	8001-230	blue	double spliced top/ bottom side loop cover *
bs3	500	PPSL5125	blue	double spliced top/ bottom side loop cover *
b1b	731	8001-50	blue	double spliced both sides
b2b	718	8001-50	blue	double spliced both sides
b3b	700	8001-50	blue	double spliced both sides
b4b	677	8001-50	blue	double spliced both sides
b5b	870	8001-50	blue	double spliced both sides
b6b	819	8001-50	blue	double spliced both sides
b7b	763	8001-50	blue	double spliced both sides
b8b	705	8001-50	blue	double spliced both sides

* Please make a larkshead on the riser shackle



Pos	125	Material	Colour	Comment
a12a	424	9200-30		double spliced both sides
a12b	413	9200-30		double spliced both sides
a13a	380	9200-30		double spliced both sides
a13b	401	9200-30		double spliced both sides
a14a	228	9200-30		double spliced both sides
a14b	249	9200-30		double spliced both sides
amu9	639	9200-30		double spliced both sides
amu10	781	9200-30		double spliced both sides
am6	5276	8001-50	orange	double spliced both sides
as4	500	PPSL5125	orange	*
br1	968	9200-30		double spliced both sides
br2	658	9200-30		double spliced both sides
br3	900	9200-30		double spliced both sides
br4	833	9200-30		double spliced both sides
br5	836	9200-30		double spliced both sides
br6	656	9200-30		double spliced both sides
br7	686	9200-30		double spliced both sides
br8	725	9200-30		double spliced both sides
br9	655	9200-30		double spliced both sides
br10	557	9200-30		double spliced both sides
br11	524	9200-30		double spliced both sides
br12	579	9200-30		double spliced both sides
brmu1	1485	9200-30		double spliced both sides
brmu2	1050	9200-30		double spliced both sides
brmu3	1136	9200-30		double spliced both sides
brmu4	1042	9200-30		double spliced both sides
brmu5	929	9200-30		double spliced both sides
brmu6	947	9200-30		double spliced both sides
brm1	2970	8001-50	orange	double spliced both sides
brm2	2786	8001-50	orange	double spliced both sides
brm3	2875	8001-50	orange	double spliced both sides
brsu1	1836	8001-190	orange	double spliced both sides
brmain	1200	DFLP200/32	orange	please add 20cm extra

* Please make a larkshead on the riser shackle

